

Installation and Care of SP-14 Multifold Paper Towel Dispenser


Warning: This product is ligature-resistant only when properly installed. A loosened fixture can easily be tied to. Any product which can be removed can be used as a weapon!

Wall Mount Installation:


1. Select a suitable location for the dispenser that meets the following criteria:

- It located such that it does not pose a hazard for a head injury due to accidental contact
- It is located sufficiently far from other objects so that objects such as sneakers or bed sheets cannot be wedged between them
- It is not near a shelf or other object located higher such that a cord can be looped around the bottom of the SP-14 and pulled over the second object

2. The footprint and mounting hole pattern of the SP-14 is shown in the diagram at right. Prepare the walls with blocking or anchors to ensure secure attachment to the wall with $\frac{1}{4}$ " screws.

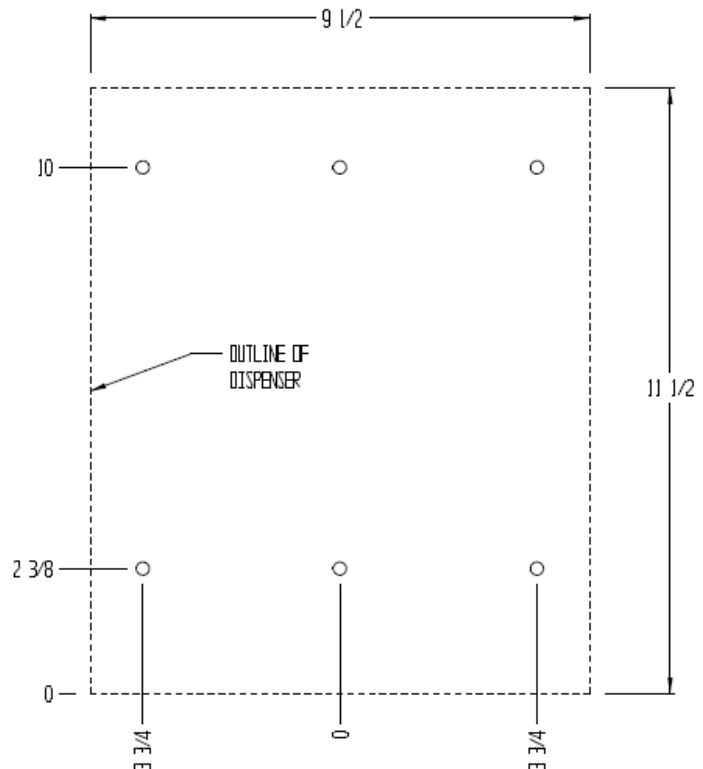

3. The components of the SP-14 are shipped as shown in the picture below. Secure the rear PVC panel (angled side on top) to the wall as prepared in step 2. Use security style ¼" flat head screws. These screws are not provided – the suitable length and thread style depends on the preparation in step 2.

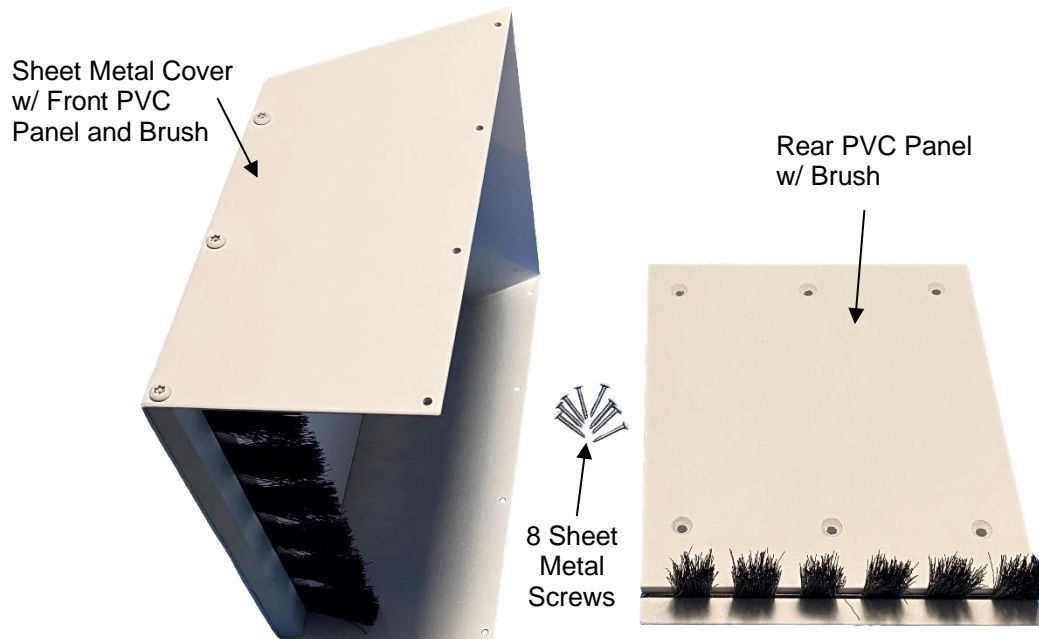

4. Use the 8 screws provided to attach the sheet metal cover to the PVC panel secured in step 3. Use of a flexible bit driver is recommended to ensure perpendicularity of the screws. Make sure the cover is tight against the wall and the PVC panel.

5. Verify that the dispenser cannot be loosened or removed. Fill any gaps between the wall with a security sealant (such as Pecora Dynapoxy EP-1200). Also fill any gaps between the cover and the PVC panels.



Loading The Dispenser With Paper Towels:

- The dispenser is sized for standard bundles of multi-fold style paper towels (not included).
- Unwrap the stack of paper towels and position it underneath the dispenser in the same orientation it is to be dispensed.
- Push the stack of paper towels upward past the bristles until the entire stack is inside the dispenser. If the stack is not neatly aligned, this step can be difficult. In that case, divide the stack into several smaller portions and insert each portion one at a time.
- Reach through the bristles and grab the edge of the first sheet of paper towel. Pull to remove it. The next sheet should now be partly exposed for easy dispensing.

A video demonstrating loading and dispensing is available for viewing at:
<https://www.youtube.com/watch?app=desktop&v=Lrrg8yIip9Q>

Care and Maintenance:

- Clean with mild detergent and a non-abrasive cloth. Aggressive cleaning techniques may remove the finish. Do not use abrasive cleaners or chemical solvents.
- Seal any chips, cracks, or scratches in the powder coating with clear nail polish to prevent future peeling or flaking.

Replacement Parts:

Replacement brushes can be requested via e-mail at ckopp@oddballindustries.com. To replace the brushes, remove the screws and the sheet metal cover to expose the PVC panels. The brushes slide left and right in the grooves in the panels.