
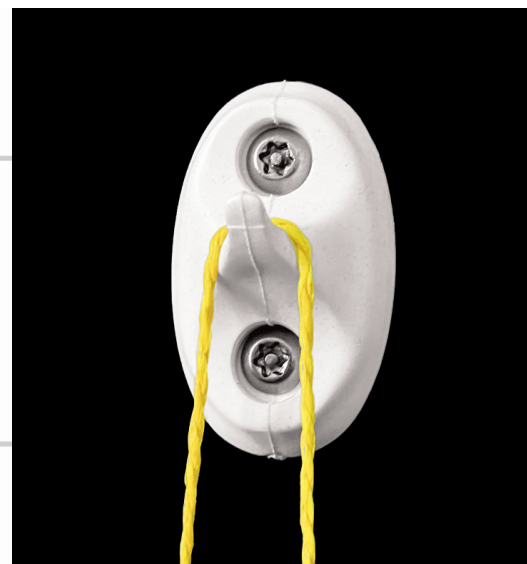


Hook Max5 & Board with hooks Max5

MOUNTING INSTRUCTIONS

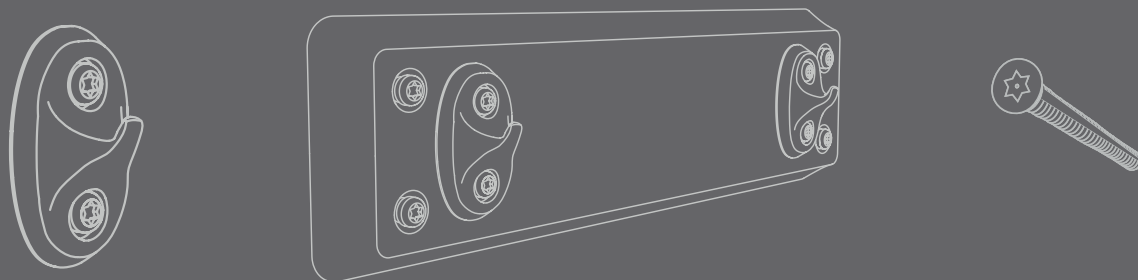

The *Hook Max5* and the *Board with hooks Max5* are designed to resist suicide attempts. The board is equipped with the *Hook Max5*. The anti-ligature properties of *Hook Max5* perform when load is applied in any directions. Easy to install, tight fit to the wall and extremely difficult to detach.

UNPACKING

- Carefully open the box/bag and check that no parts have been damaged during the transportation.
- Check content against the parts list.
- Security screws are not included. Can be ordered from HealSafe Interior.


Mounting parts



Hook Max5 – HSI160-168



Board w hooks Max5 (2-5) – HSI169-172

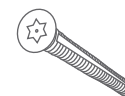


Hook: **Security screw, 50 mm, button head**
– JT 271 (if ordered from HealSafe Interior)

Board with hooks: **Security screw, 50 mm, counter-sunk** – JT 275 (if ordered from HealSafe Interior)

DESCRIPTION

- The ligature resistant properties of *Hook Max5* is activated when a load over 5 kg is applied in any direction. - *Figure 1*.

Figure 1

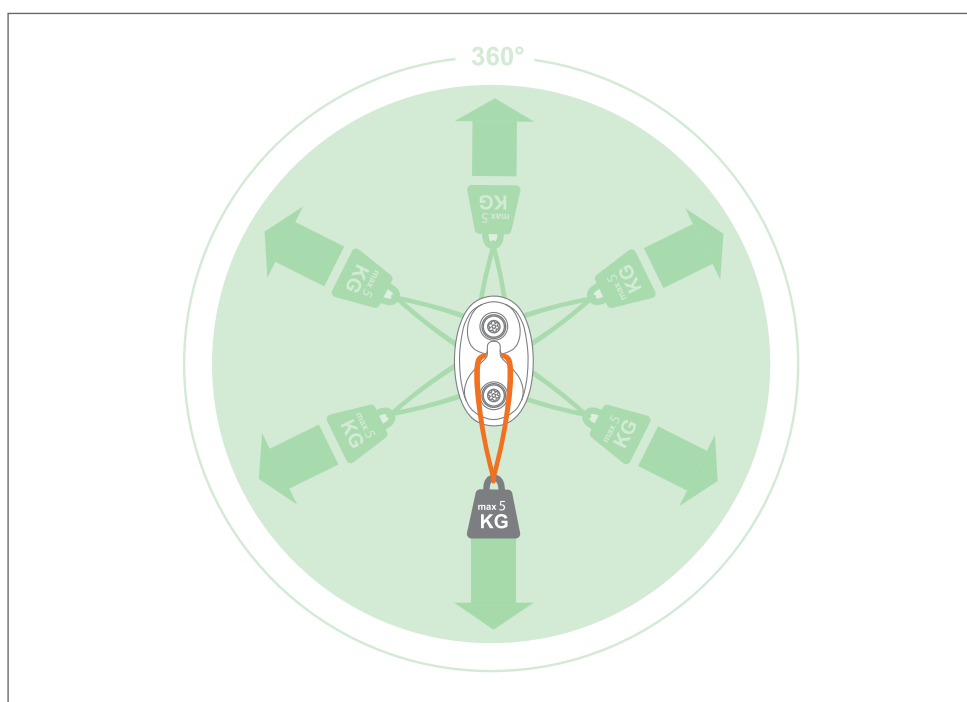


PREPARATION

- The *Hook Max5/Board with hooks Max5* shall be mounted with safety screws.
- *Hook Max5*: The screw head's diameter should be from 9.5–10 mm to fit the hook hole. The diameter of the screw should not exceed 5 mm in diameter, which is the diameter of the holes. C-C between the hook holes is 28 mm (equal c-c distance as for hook JT-100).
- *Board with hooks Max5*: The screw head's diameter should be from 9.5–10 mm to fit the countersunk hole. The diameter of the screw should not exceed 5 mm in diameter, which is the diameter of the holes of the board.
- Mounting should be done so that the *Hook Max5/Board with hooks Max5* fits tight against the surface it is mounted against. Uneven surfaces should be avoided.

MOUNTING

- The *Hook Max5/Board with hooks Max5* may be mounted to any kind of door or side of a cabinet that has doors or inside a cabinet.
- When installing multiple *Hooks Max5/Boards with hooks Max5* in a row, C-C may never be less than 200 mm. - Figure 8. ⚠
- Should any of the mounting instructions not be followed according to the descriptions, the safety tests conducted by HealSafe Interior cannot be met. If the placement of hooks render questions regarding risk please contact us.

Figure 8

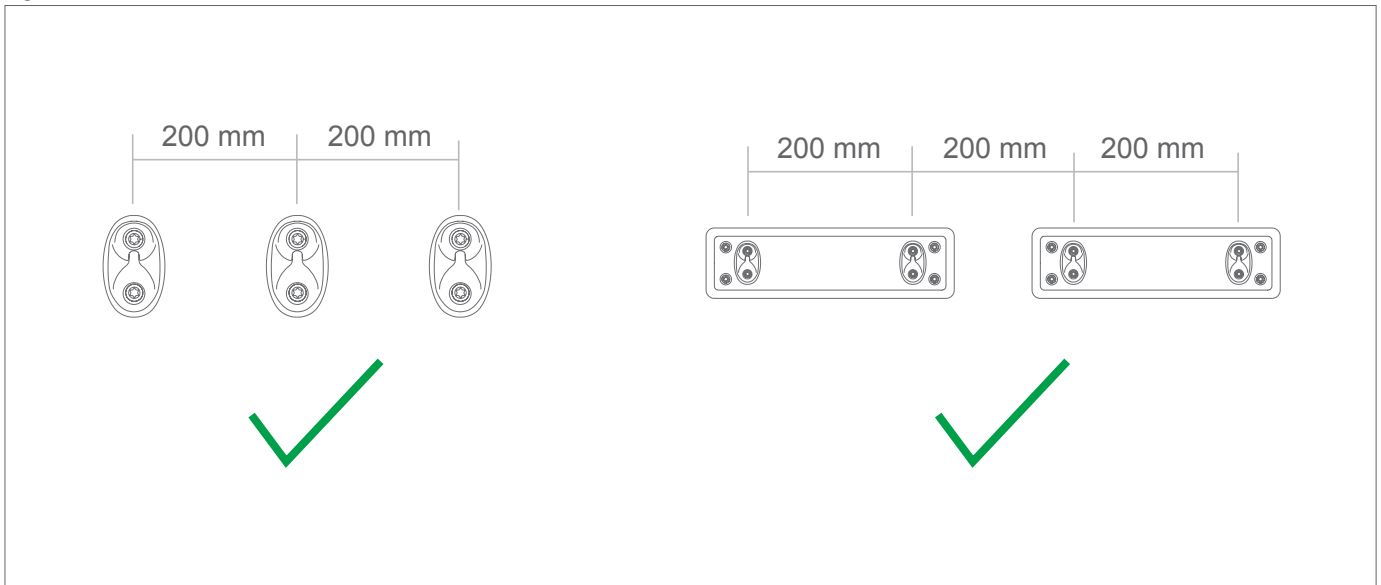

CHECK BEFORE USE

- After installation ensure that the *Hook Max5/Board with hooks Max5* fits tight to the surface and check that no objects, wire or string can be inserted between the *Hook Max5/Board with hooks Max5* and the surface it is mounted against. Uneven surfaces must be avoided.



WARNING If the *Hook Max5/Board with hooks Max5* is not mounted securely with security screws, or if the instructions and precautions are not followed, this can result in severe bodily injury or even death.

This mounting instruction is enclosed as a hard copy in the delivery of the products. Consumer is charged with the knowledge of the Mounting instructions for *Hook Max5/Board with hooks Max5* set forth in any modifications. Please contact your local distributor/supplier or HealSafe Interior to ensure you have got the latest version of this mounting instruction.



Scan QR code to download Disclaimer (<https://healsafeinterior.com/disclaimer/>).

It is not possible for HealSafe Interior® to warn the consumer about every possible danger related to use of the product and the consumer must use his or her own common sense and good judgement when using the product.